

F.I.T. JOGGER[®]

ASSEMBLY INSTRUCTIONS



IMPORTANT - Keep these instructions for future reference.

Read these instructions carefully before use. Your child's safety may be affected if you do not follow these instructions.



www.babyjogger.com


Table of Contents

» Warning	3
» Features	5
» Frame.....	6
» Front Wheel.....	7
» Rear Wheels.....	8
» Footplate	8
» Parking Brake	9
» Hand Brake.....	9
» Safety Harness.....	10
» Seat Recline	12
» Basket Removal	13
» Canopy.....	14
» Seat.....	15
» Quick Fold Technology.....	16
» Care & Maintenance	18
» Limited Warranty	19

WARNING:


Single Stroller

- This stroller seats one passenger.
 - This vehicle is suitable from 6 months to 5 years. Maximum weight: 75 lbs/34 kg.
 - Total weight load recommended for this stroller is 87 lbs/40 kg (75 lbs/34 kg in seat, 2 lbs/1 kg in seat back pocket, 10 lbs/4.5 kg in basket).
-
- **WARNING:** This stroller is not suitable for skating or rollerblading.
 - **WARNING:** Never leave your child unattended.
 - **WARNING:** Always use the restraint system.
 - **WARNING:** Child may slip into leg openings and strangle. Never use in reclined carriage position unless safety harness is properly fastened.
 - **WARNING:** Check that the pram body or seat unit attachment devices are correctly engaged before use.
 - **WARNING:** To avoid injury, ensure that your child is kept away when unfolding and folding this product.
 - **WARNING:** Do not let your child play with this product.
 - **WARNING:** Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.
 - **WARNING:** Any load attached to the handle affects the stability of the pram/pushchair.
 - Recommended weight for seat back pocket is 2 lbs/1 kg and basket is 10 lbs/4.5 kg. Excessive weight may cause a hazardous unstable condition to exist.
 - Stroller is not meant to be used for transporting children up or down stairs. Damage resulting to stroller, will not be covered under warranty.
 - Accessories which are not approved by the manufacturer or distributor shall not be used.
 - Watch out for cars – never assume that a driver can see you and your child.
 - The passenger shall remain seated (no standing in the stroller).
 - It may be unsafe to use replacement parts other than those supplied or approved by the manufacturer.
 - The product may become unstable if a parcel bag, other than one recommended by the manufacturer, is used.
 - Always keep fingers away from moving parts when folding, unfolding, or adjusting the stroller to prevent entrapment or pinching.
 - This stroller does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot, or bed.
 - Never run/jog with children under 6 months of age. Consult your child's pediatrician before running/jogging with your child.

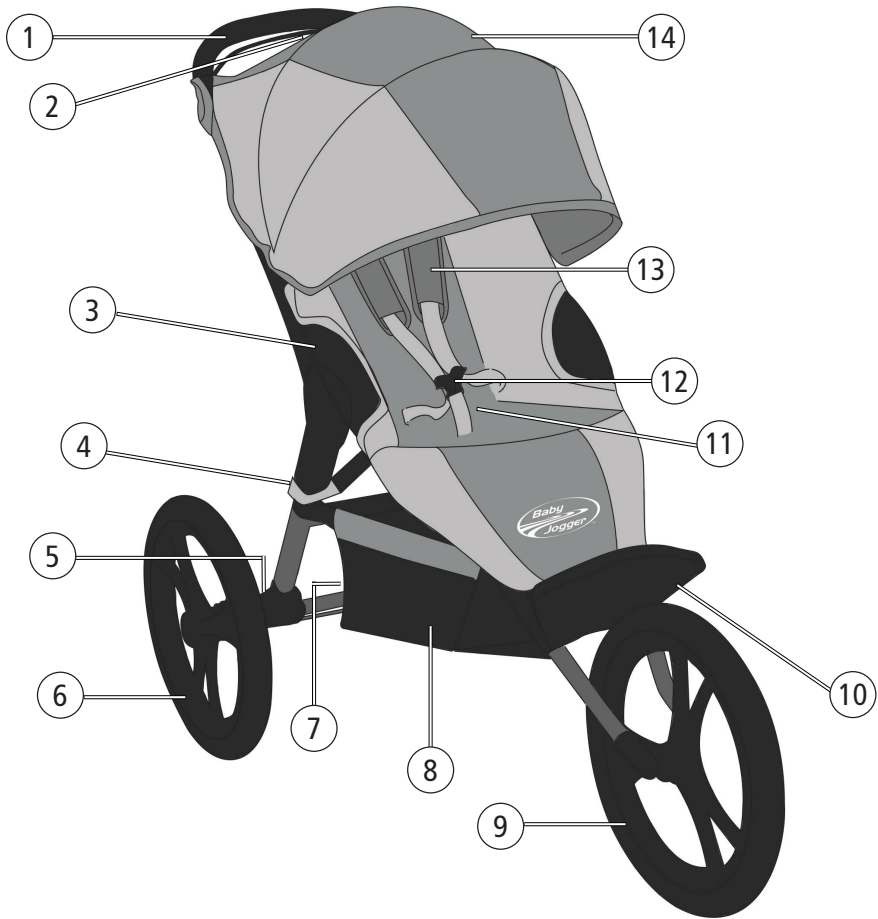

FEATURES

- ① **Handlebar**
- ② **Hand Brake**
- ③ **Accessory Mounting Bracket**
- ④ **Safety Strap**
- ⑤ **Rear Wheel Release Button**
- ⑥ **Rear Wheel**
- ⑦ **Parking Brake**
- ⑧ **Storage Basket**
- ⑨ **Front Wheel**
- ⑩ **Footplate**
- ⑪ **Fold Handle**
- ⑫ **Harness Buckle**
- ⑬ **Harness Pads**
- ⑭ **Canopy**

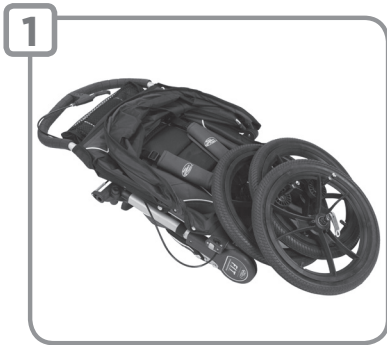


FRAME

- 1 Unpack the stroller from the box and set the wheels aside.
- 2 Pull Handlebar [1] up and away from fork tips.

⚠ WARNING: Ensure that all the locking devices are engaged before use.




- 3 Lay stroller flat so that both ends are resting on the floor. The stroller frame will click into place.
- 4 Turn stroller over. Snap red safety strap [4] to frame below the fold mechanism on both sides.

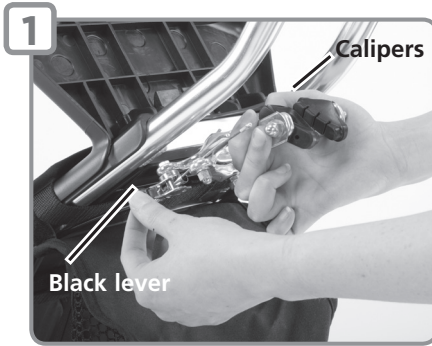



FRONT WHEEL

Installation

- 1 Lay stroller on its back so the Handlebar [1] is resting on the floor. Squeeze the two brake calipers together and push the black lever backwards to open brake pads. Release calipers so that they spring open.
- 2 Insert Front Wheel [9] into the fork tips by aligning the axle flats with the fork tip flats. Tighten by turning the wheel lever clockwise while holding the opposite side of the skewer.

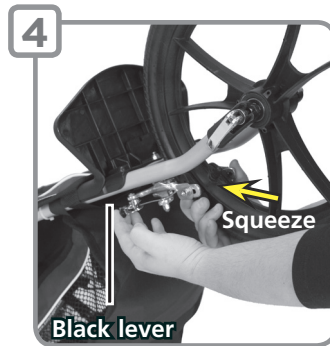

- 3 Close the wheel lever by pushing it flush against the tubing. Be sure not to over tighten.
- 4 Squeeze the two brake calipers together against the wheel rim. Pull the black lever forward to close the brake pads.

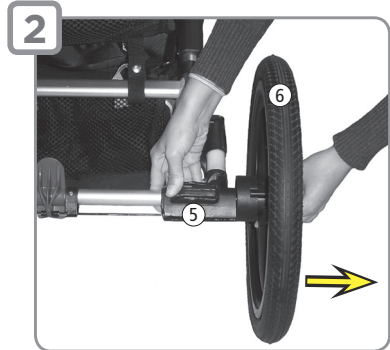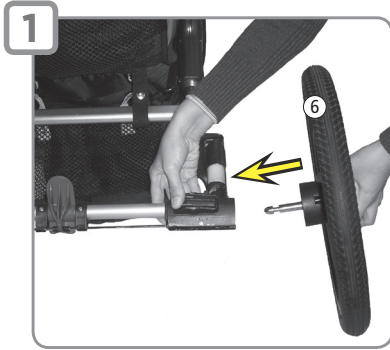



REAR WHEELS

1 Installation

- Align the Rear Wheel [6] axle with the wheel mount on the stroller frame and insert it into the wheel mount until it clicks into place.
- Gently pull on the Rear Wheel [6] to make sure it is properly attached.


2 Removal

- While pressing the Wheel Release Button [5], gently slide the Rear Wheel [6] out of the wheel mount.

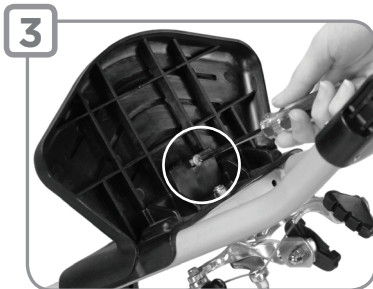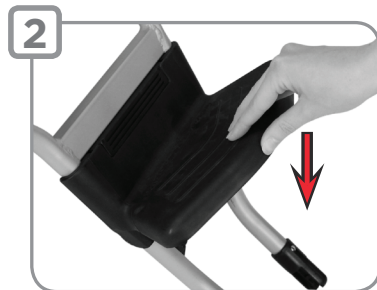


FOOTPLATE

- 1 Insert Footplate [10] tab into the footplate mounting bracket on the stroller frame above the front wheel.
- 2 Snap down onto stroller frame.
- 3 Using a Phillips head screwdriver, attach footplate mounting bracket with screw supplied (you will find the screw in the bag with the instructions).

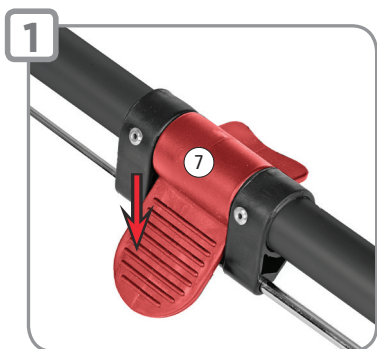


Engaged

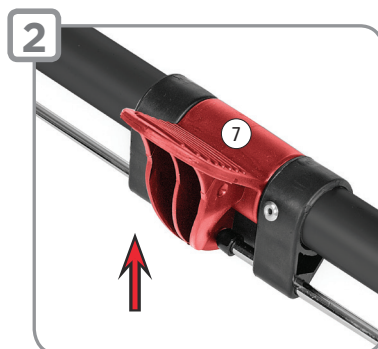

Disengaged

PARKING BRAKE


- 1 Simply push the Parking Brake [7] pedal down to engage the brakes.
- 2 Lift it up to release.

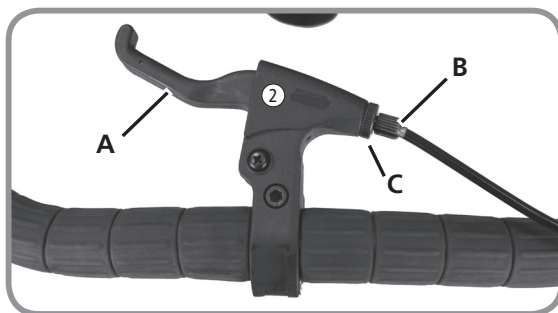

HAND BRAKE

- Your stroller is equipped with a Hand Brake [2] for your jogging convenience.

Adjusting the hand brake: If you do not have good braking action, simply squeeze the brake handle (A) five or six times. If the problem persists, loosen the brake's cylinder ring (B) to adjust the small ring (C) and then move the small ring away from the handle to tighten the cable. (Please do not over tighten!) To lock the rings, tighten the cylinder ring (B) against the handle while holding the small ring (C) in place.

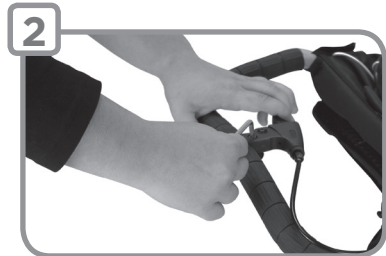

- 1 Squeeze the Hand Brake [2] to give you better control over your stroller while jogging or running.
- 2 To rotate the hand brake's position on the handlebar, loosen the bolt using an Allen wrench. Rotate the hand brake assembly on the handlebar until it is in comfortable position. Tighten the bolt to secure the brake.



SAFETY HARNESS

1 To adjust harness height

- Unclip top of shoulder strap from the seat and re-clip on the pair of seat loops closest to the child's shoulder height.



2 To adjust harness length

- Pull Harness Pads [13] down close to main Harness Buckle [12] to expose the plastic guide.
- Hold the plastic guide and pull the strap end to tighten or pull the upper harness strap to loosen.

3



3 To buckle the harness

- Push both shoulder harness buckles into center buckle until it locks into place.



WARNING: Always use the crotch strap in combination with the shoulder straps and waist belt.

4





4 To unbuckle

- Push one side of the center buckle [12] and pull the corresponding shoulder harness buckle away from the center buckle. Repeat to unbuckle other side.



WARNING: Avoid serious injury from falling or sliding out. Always properly adjust and fasten safety harness.

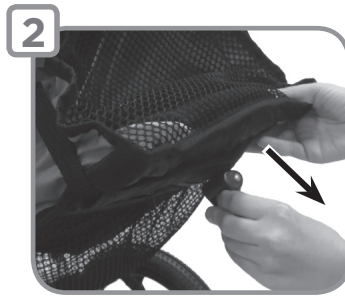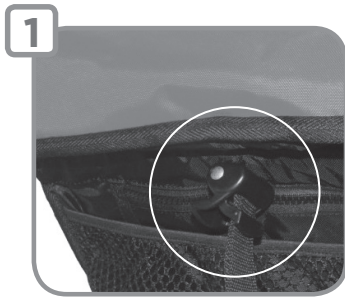


SEAT RECLINE

- 1 Pinch the clamp behind the seat, and slide it down to desired recline.
- 2 Pull seat down on both sides to match recline position of clamp.
Reverse to return to upright position.




Weather Cover: If desired, pull weather cover down and over the seat back mesh. Secure firmly over both sides of seat. When not in use, roll weather cover up and fasten with elastic loop and barrel provided under the top of the seat fabric.

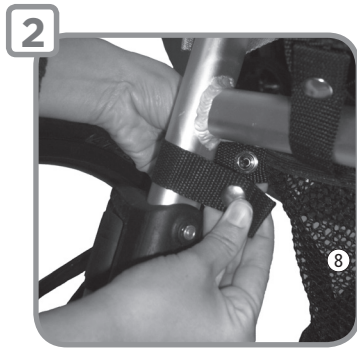


BASKET REMOVAL

- 1 From the front of the stroller: Unfasten Velcro® on lower seat fabric to expose the bottom front portion of frame. Unfasten Basket Velcro® from around the frame tubing. Velcro® seat fabric back to stroller frame once complete.
- 2 From the rear of the stroller: Unsnap the top snaps of the Basket [8] from around the frame tubing above the middle crossbar. Unsnap the bottom snaps of the basket from around the frame tubing below the middle crossbar.

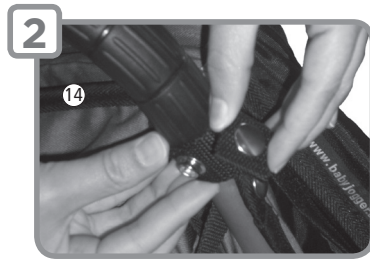

CANOPY

- 1 Unsnap seat frame to reveal mounting bracket location. Use a Phillips head screwdriver to attach Canopy [14] bracket to frame.
- 2 Wrap straps around frame and snap together.
- 3 Velcro® canopy strap around frame and back to the top of the canopy.

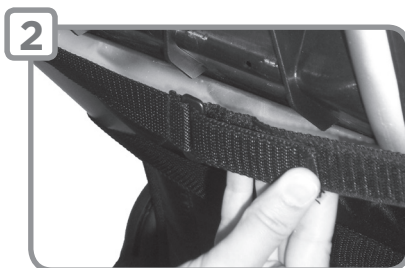

SEAT

- 1 Attach seat fabric using snaps along the frame.
- 2 Secure the straps around the bottom of the frame behind the front wheel. Thread through the D-ring and attach using the Velcro®.
- 3 Make sure the straps are securely attached to the frame before use.

⚠ WARNING: Always be sure the safety strap is securely snapped onto the frame before using the stroller.



QUICK FOLD TECHNOLOGY

- 1 Remove the child from the seat. Unsnap the red Safety Straps [4] from the frame.
- 2 Pull upwards on the "Pull to Fold" Fold Handle [11] with a gentle tug and your stroller will fold in half.



⚠ WARNING: Always be sure the safety strap is securely snapped onto the frame before using the stroller.

CARE & MAINTENANCE

To preserve the longevity of your stroller, it is important to perform simple, regular maintenance. From time to time, make sure that the joints and folding areas are still in good condition. If you hear any squeaking or feel tension, you can take your stroller to a local bike shop for added lubrication. All repairs should only be carried out by an authorized dealer.

Washing

Seat Fabric

- You can machine wash your stroller's seat in cold water with a mild detergent.
- Be sure to remove the metal frame from the seat before washing.
- Do not use solvents, caustic or abrasive cleaning materials.
- To minimize shrinkage, simply reattach the seat to the frame to dry.
- Do not press, iron, dry clean, tumble dry or wring the fabric.
- If the seat covers need to be replaced only use parts from a Baby Jogger Authorized Dealer. They are the only ones that are guaranteed to have been safety tested and designed to fit this seat.

Plastic/Metal Parts

- Wipe clean using a mild soap and warm water.
- You must not remove, dismantle or alter any part of the seat folding mechanism or brakes.

Wheel Care

- The wheels can be cleaned using a damp cloth. They will need to be dried completely with a soft towel or cloth.

Storing

- Sunshine can fade seat fabric and dry out tires, so storing your stroller indoors will prolong its good looks.
- DO NOT store outside.
- Ensure that the stroller is dry before storing for prolonged periods.
- Always store the stroller in a dry environment.
- Store the stroller in a safe place when not in use (i.e. where children cannot play with it).
- DO NOT place heavy objects on top of the stroller.
- DO NOT store the stroller near a direct heat source such as a radiator or fire.

BABY JOGGER LIMITED WARRANTY

Baby Jogger's Limited Lifetime Warranty:

- Baby Jogger warrants that the frame is free of manufacturer defects for the lifetime of the product. Manufacturer's defects include but are not limited to the breaking of welds and frame tube damage.
- Textile or soft side materials and all other components shall be warranted for manufacturing defects for one year from the date of purchase (except for tubes and tires).
- Proof of purchase is required to make a warranty claim and the warranty only applies to the original purchaser.

THIS WARRANTY DOES NOT COVER:

- Normal wear and tear
- Corrosion or rust
- Incorrect assembly, or the installation of third party parts or accessories which are not Baby Jogger approved parts and accessories
- Repairs, maintenance and modification that has not been carried out by Baby Jogger approved dealers
- Accidental or intentional damage, abuse or neglect
- Commercial Use
- Improper storage/care of the unit
- Products purchased from the United States or outside of your country.

This warranty specifically excludes claims for indirect, incidental, or consequential damages. The implied warranties of merchantability and fitness for a particular purpose is according to the specific warranty period for this model unit at time of purchase.

Baby Jogger USA has different terms, conditions, models and test criteria. Baby Jogger USA must not be used to get information on specifications or warranty terms. Warranty registration online is only for U.S. customers.

CONTACT INFORMATION:

Each Baby Jogger distributor is responsible for handling warranty claims on products they distribute within their own country. Should a problem arise regarding your Baby Jogger stroller, please contact the distributor of the country from where you purchased. A list of our authorized distributors can be found www.babyjogger.com.



NOTE: When contacting Baby Jogger regarding your stroller, please have your stroller's serial number and manufacturing date ready. It can be found on the right fold mechanism.

***Distribué au Canada par:
Brands in Motion Inc.***

*300 Ambassador Drive • Mississauga, Ontario • L5T 2J3
Toll Free: 1.866.774.7177 T: 905.795.3154 • F: 905.795.8988
www.babyjogger.ca*



The Baby Jogger Company

*8575 Magellan Parkway, Suite 1000 • Richmond, VA 23227
T: 800.241.1848 • F: 804.262.6277 • www.babyjogger.com*