


Sirona R44/04

**Changes Q4 2017**

# Sirona R44/04

## Modification of the buckle storage


1. The red cover of the storage compartment will be changed in the current Sirona R44 version
2. The buckle will be further stored in the storage compartment
3. The belt tongues get a new storage location in the backrest of the seat

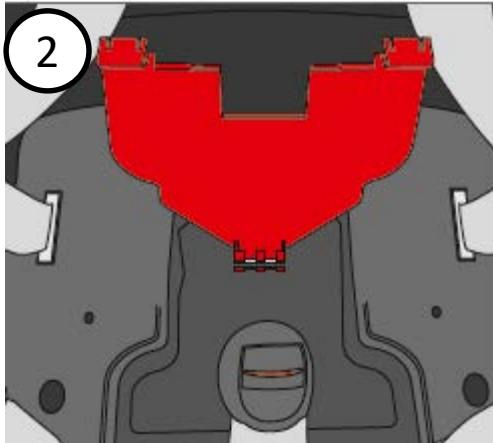


# Sirona R44/04

## Manual change 1/2

### Sirona today (p. 3)

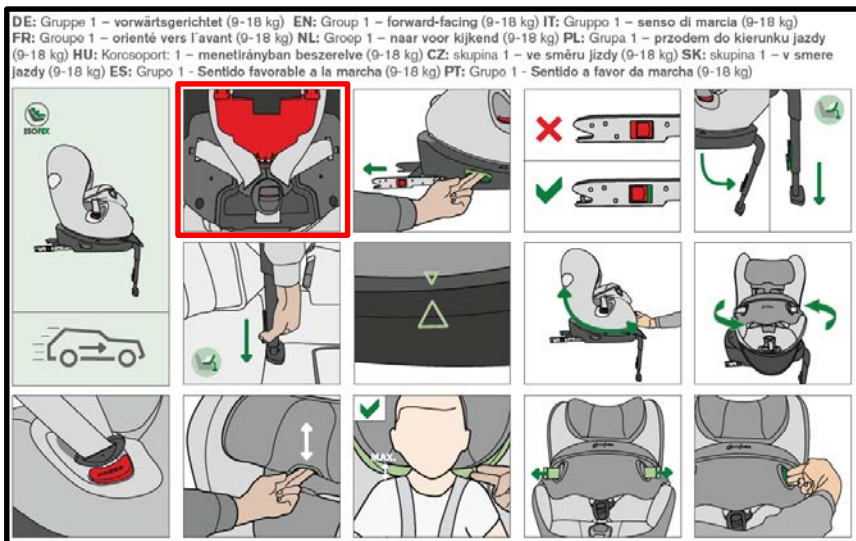

### Sirona new (p. 3)

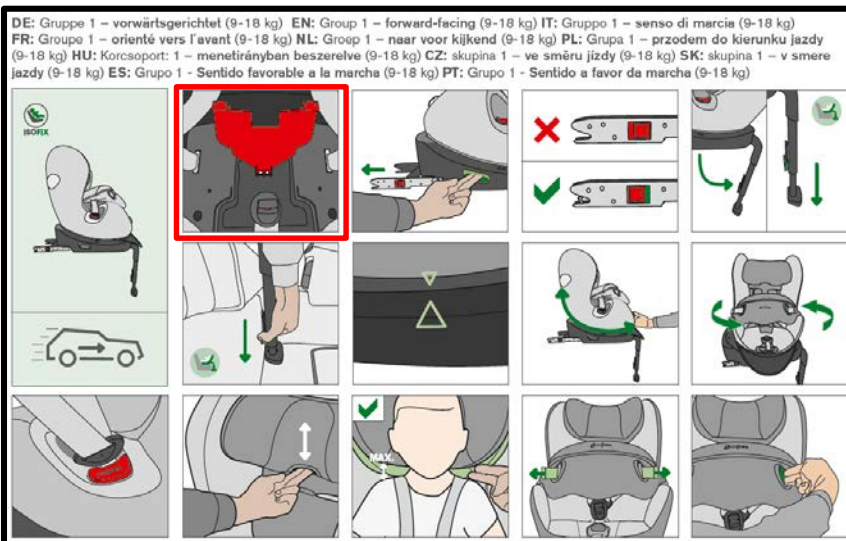


change

# Sirona R44/04

## Manual change2/2

### Sirona today (p. 31)

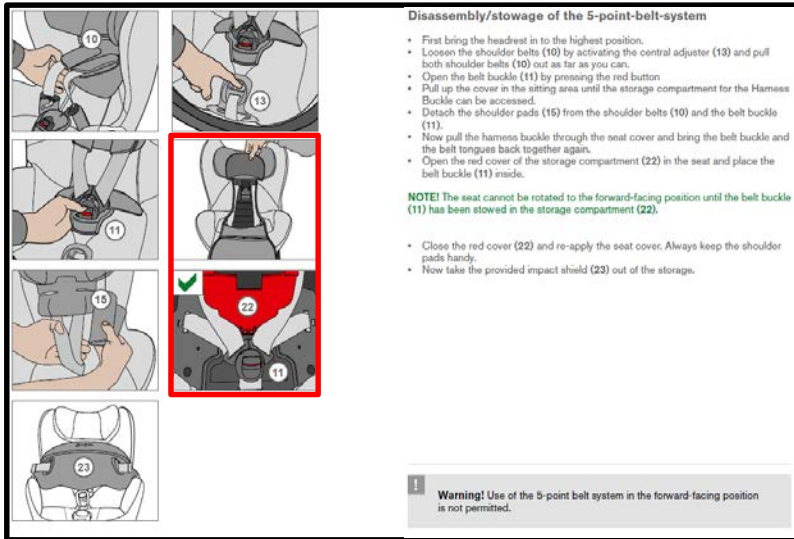

**Disassembly/storage of the 5-point-belt-system**


- First bring the headrest in to the highest position.
- Loosen the shoulder belts (10) by activating the central adjuster (13) and pull both shoulder belts (10) out as far as you can.
- Open the belt buckle (11) by pressing the red button
- Pull up the cover in the sitting area until the storage compartment for the Harness Buckle can be accessed.
- Detach the shoulder pads (15) from the shoulder belts (10) and the belt buckle (11).
- Now pull the harness buckle through the seat cover and bring the belt buckle and the belt tongues back together again.
- Open the red cover of the storage compartment (22) in the seat and place the belt buckle (11) inside.

**NOTE!** The seat cannot be rotated to the forward-facing position until the belt buckle (11) has been stowed in the storage compartment (22).

- Close the red cover (22) and re-apply the seat cover. Always keep the shoulder pads handy.
- Now take the provided impact shield (23) out of the storage.

**Warning!** Use of the 5-point belt system in the forward-facing position is not permitted.

### Sirona new (p. 31)

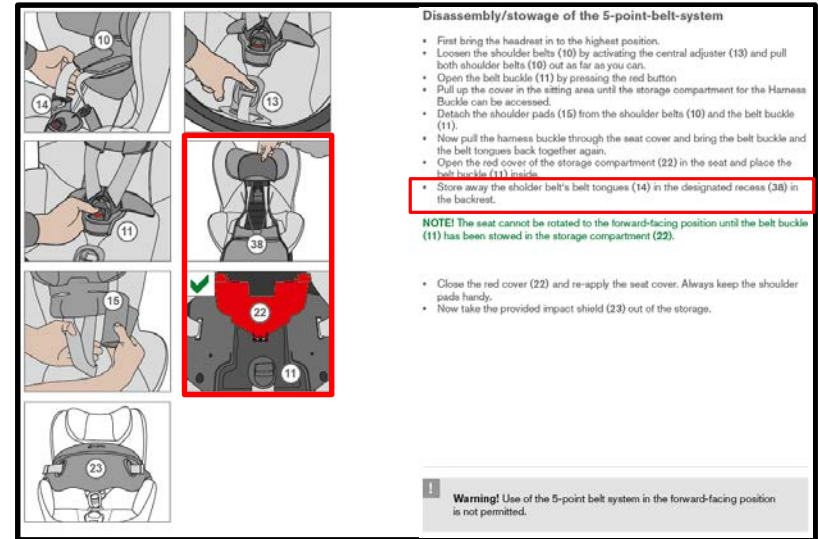

**Disassembly/storage of the 5-point-belt-system**

- First bring the headrest in to the highest position.
- Loosen the shoulder belts (10) by activating the central adjuster (13) and pull both shoulder belts (10) out as far as you can.
- Open the belt buckle (11) by pressing the red button
- Pull up the cover in the sitting area until the storage compartment for the Harness Buckle can be accessed.
- Detach the shoulder pads (15) from the shoulder belts (10) and the belt buckle (11).
- Now pull the harness buckle through the seat cover and bring the belt buckle and the belt tongues back together again.
- Open the red cover of the storage compartment (22) in the seat and place the belt buckle (11) inside.
- Store away the shoulder belt's belt tongues (14) in the designated recess (38) in the backrest.

**NOTE!** The seat cannot be rotated to the forward-facing position until the belt buckle (11) has been stowed in the storage compartment (22).

- Close the red cover (22) and re-apply the seat cover. Always keep the shoulder pads handy.
- Now take the provided impact shield (23) out of the storage.


**Warning!** Use of the 5-point belt system in the forward-facing position is not permitted.

change

# Sirona R44/04

## New label underneath the cover

2 new labels

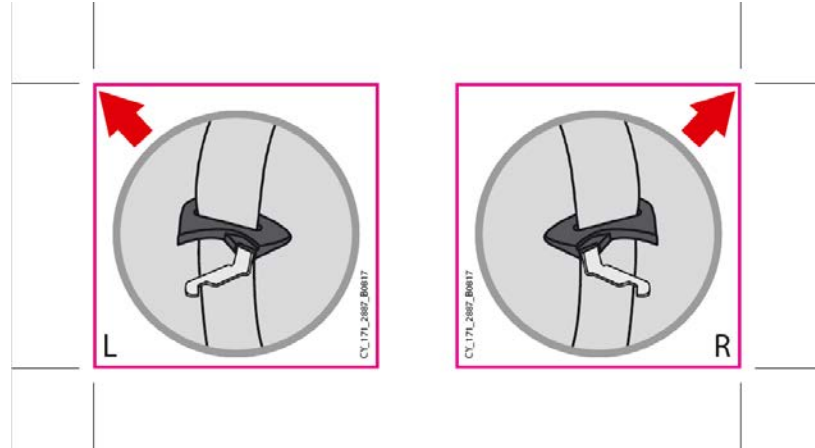

Positions of the label





*for all tomorrow's people*

[www.cybex-online.com](http://www.cybex-online.com)